TRADESMAN

TALTM 48, 60, 72, 90, 96
TALPTM 72, 90, 96
TSTM 48, 60, 72, 90

1) Locate Top Mount Box in desired position.
2) Drill holes in bottom of box and bed side rail. Attach with 3/8" bolts, nuts and washers.
3) Locate rear stabilizer bracket (included in the box).
4) Attach bracket to back of box and bed floor.

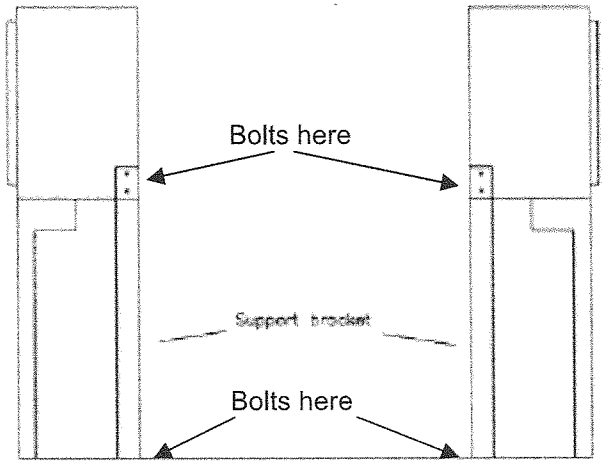

Rear view of truck bed